

Safe Operating Procedures

Make: Paus
Model: AKR 9095 HP
Type: Dump Truck - Site
Serial Number: 325P232
Plant Number: AHS232



Recommended PPE - Subject to Company & Site Policy



SOP Dump Truck - Site

GENERAL & START UP

Read and understand manufacturer's operational manual
Complete pre-operational checklist (never use faulty or defective machinery)
All operators must be free from the direct and after effects of drugs and alcohol
Ensure that an appropriate, charged fire extinguisher is available
Know your site dumper, its features and how they work. Keep your machine in good condition
Ensure work area is clear of all bystanders and hazards prior to starting engine and operating machine
Always ensure all guards are securely fitted prior to start up
Once engine is started confirm control pattern and machine function

TRAVEL & OPERATION

- ! ALWAYS** WEAR YOUR SEAT BELT
- ! NEVER** USE MOBILE PHONE WHILE OPERATING MACHINE
- ! NEVER** CARRY PASSENGERS

Always mount and dismount the machine at locations that have steps and/or handholds, maintain 3 points of contact at all times
Ensure front and rear swing area is clear of bystanders and objects
Avoid hard or sudden braking, especially when loaded
Refer to power line approach distance label re safety around power lines
Always stay alert and look for holes and other hidden hazards, especially when operating off road
Do not dismount from site dumper unless engine is stopped, the transmission is in park position and the parking brake is effectively engaged

Stay Alert! Watch what you are doing. Use common sense. Do not operate when you are tired

ROLLOVER HAZARD

- ALWAYS** use extreme caution when driving adjacent excavations and batter edges
- NEVER** POSITION MACHINE OVER "SHELF" ADJACENT EXCAVATION
- NEVER** move truck while tipping body is elevated unless in crawl gear on level surfaces
- NEVER** operate tipping body under precipice or overhead obstructions
- NEVER** travel across slopes, travel up and down slopes only

When stopping the dumper, park on even ground, shift the gear selector to park position and apply the parking brake, turn off the ignition and remove the keys

TRANSPORT & MAINTENANCE

- ALWAYS** switch off and isolate machine prior to performing any maintenance or transportation
- ALWAYS** employ safety prop prior to accessing area under raised tipping body

REFUELLING

- NEVER** refuel unless the engine is stopped and ignition turned off
- NEVER** smoke during refueling

Safe Operating Procedures

Operator Acknowledgement

I the undersigned acknowledge that I have read and understand the Safe Operating Procedures described above. I also acknowledge that I have received a copy of this Safe Operating Procedure.

[illegible]