

CATERPILLAR CAT323

Customer

Major Service 0 0 0
Inspection Number RP054637 Customer No 200000

Serial Number RAZ10993 Customer Name AUSTRALIAN HAMMER

SUPPLIES HIRE

0

0

Make CATERPILLAR Customer Email

Model CAT323 Works Order RP054637

Equipment Family 17.1-22.5T HYDRAULIC EXCAVATOR Completed On 25/11/2025 7:29:13 AM

Asset ID AHSH79 Inspector Collin Graham

Location AUSTRAILAN HAMMER SUPPLIES HIRE PDF Generated On 25/11/2025

Unit 3/32 WILLIAMSON RD

Machine Hours 5008

INGLEBURN 2565

Next Meter 4988

Change inner air filter

Change hydraulic return filter

yes

Change hydraulic suction filter

no

Change hydraulic pilot filter

no

Take hydrulic oil sample

yes

Change hydraulic oil (litres used)

140

Change engine oil (litres used)

General Info & Comments

General Info/Comments 5000 hr service

TASK SAFETY INSTRUCTIONS

Severity Report Serial Number: RAZ10993 Asset ID: AHSH79 Page 1 of 7



1.1 Wear Correct PPE at all times 1.2 All isolation and safe work procedures must be followed 1.3 Identify task hazards and controls utilising hierarchy or controls model 1.4 Ensure a competent operator and spotter is utilised to move mobile equipment 1.5 Ensure all mobile equipment is fundamentally stable 1.6 Ensure three points of contact is maintained during access and egress 1.7 Ensure acceptable housekeeping standards are maintained at all times PASS 1.7 Ensure acceptable housekeeping standards are maintained at all times PASS MACHINE GENERAL RUNNINGCHECKS 2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons 2.5 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of reverse camera PASS 2.9 Check direnator charge voltage PASS 3.1 Ensure fire suppression bottle and components are securely mounted and in good condition PASS 5.2 Ensure fire suppression bottle and components are securely mounted and in good condition PASS 5.4 Check all fire extinguishers are securely mounted and in good condition PASS		•	
1.3 Identify task hazards and controls utilising hierarchy or controls model 1.4 Ensure a competent operator and spotter is utilised to move mobile equipment PASS 1.5 Ensure all mobile equipment is fundamentally stable 1.6 Ensure three points of contact is maintained during access and egress PASS 1.7 Ensure acceptable housekeeping standards are maintained at all times PASS MACHINE GENERAL RUNNINGCHECKS 2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition 5.2 Ensure fire suppression is correctly charged 5.3 Inspect last charge date DATE:2025-11-2570:00:00.000000000000000000000000000000	● 1.1 W	ear Correct PPE at all times	PASS
1.4 Ensure a competent operator and spotter is utilised to move mobile equipment PASS 1.5 Ensure all mobile equipment is fundamentally stable PASS 1.6 Ensure three points of contact is maintained during access and egress PASS 1.7 Ensure acceptable housekeeping standards are maintained at all times PASS MACHINE GENERAL RUNNINGCHECKS 2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition 5.2 Ensure fire suppression is correctly charged 5.3 Inspect last charge date DATE 2025-11-25700.00.00. 0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	● 1.2 A	I isolation and safe work procedures must be followed	PASS
1.5 Ensure all mobile equipment is fundamentally stable 1.6 Ensure three points of contact is maintained during access and egress PASS 1.7 Ensure acceptable housekeeping standards are maintained at all times PASS MACHINE GENERAL RUNNINGCHECKS 2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE 2025 - 11 - 25100.00.00.0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	1.3 ld	entify task hazards and controls utilising hierarchy or controls model	PASS
1.6 Ensure three points of contact is maintained during access and egress 1.7 Ensure acceptable housekeeping standards are maintained at all times PASS MACHINE GENERAL RUNNINGCHECKS 2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A DATE:2025-11-25T00:00:00.00000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	● 1.4 E	nsure a competent operator and spotter is utilised to move mobile equipment	PASS
1.7 Ensure acceptable housekeeping standards are maintained at all times PASS MACHINE GENERAL RUNNINGCHECKS 2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE 2025-11-25T00:00:00.00000000 DASS 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	● 1.5 E	nsure all mobile equipment is fundamentally stable	PASS
MACHINE GENERAL RUNNINGCHECKS 2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE:2025-11-2570:00:00.0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	● 1.6 E	nsure three points of contact is maintained during access and egress	PASS
2.1 Check all work lights, beacon & reverse alarmfor operation PASS 2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A DATE:2025-11-25700:00.00.0000000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	● 1.7 E	nsure acceptable housekeeping standards are maintained at all times	PASS
2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS 2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE:2025-11-25700:00.0 0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	MACHIN	E GENERAL RUNNINGCHECKS	
2.3 Check idle timer for correct shut down operation PASS 2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A DATE:2025-11-25T00:00:00.000000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.1 C	neck all work lights, beacon & reverse alarmfor operation	PASS
2.4 Check operation of all three emergency stop buttons PASS 2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A DATE:2025-11-25700:00:00.0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.2 T	est all dash warning lights, gauges and audible alarms for correct operation	PASS
2.5 Check operation of horn PASS 2.6 Check operation of reverse camera PASS 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A DATE:2025-11-25700:00:00.00000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.3 C	neck idle timer for correct shut down operation	PASS
2.6 Check operation of reverse camera 2.7 Check alternator charge voltage PASS 2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A DATE:2025-11-25T00:00:00.0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.4 C	neck operation of all three emergency stop buttons	PASS
2.7 Check alternator charge voltage 2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' N/A PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE:2025-11-2570:00:00.0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.5 C	neck operation of horn	PASS
2.8 Check operation of auto grease systemby manually activating timer N/A 2.9 Check fire systemcontrol panel for 'Normal' PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE:2025-11-25700:00:00.00000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.6 C	neck operation of reverse camera	PASS
2.9 Check fire systemcontrol panel for 'Normal' PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE:2025-11-25700:00:00.00000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.7 C	neck alternator charge voltage	PASS
PM FIRE SUPPRESSION SYSTEM 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE:2025-11-25T00:00:00.0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	2.8 C	neck operation of auto grease systemby manually activating timer	N/A
 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition 5.2 Ensure fire suppression is correctly charged 5.3 Inspect last charge date DATE:2025-11-25T00:00:00.0000000 5.4 Check all fire extinguishers are securely mounted and in good condition 	② 2.9 C	neck fire systemcontrol panel for 'Normal'	N/A
good condition 5.2 Ensure fire suppression is correctly charged N/A 5.3 Inspect last charge date DATE:2025-11-25T00:00:00. 00000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	PM FIRE	SUPPRESSION SYSTEM	
5.3 Inspect last charge date DATE:2025-11- 25T00:00:00. 00000000 DATE:2025-11- 25T00:00:00. PASS			N/A
25T00:00:00. 0000000 5.4 Check all fire extinguishers are securely mounted and in good condition PASS	● 5.2 E	nsure fire suppression is correctly charged	N/A
	5.3 I r	spect last charge date	25T00:00:00.
	● 5.4 C	neck all fire extinguishers are securely mounted and in good condition	PASS
Severity Report Serial Number: RAZ10993 Asset ID: AHSH79 Page 2 c	Severity Rep	ort Serial Number: RAZ10993 Asset ID: AHSH79	Page 2 of 7



5.5 Check all fire extinguishers are correctly charged	PASS
5.6 Inspect last charge date	DATE:2025-11- 25T00:00:00. 0000000
PM ENGINE	
6.1 Performengine valve set	N/A
6.2 Inspect air intake systemhoses, pipes, clamps for signs of dirt ingress	PASS
6.3 Inspect engine for oil or fuel leaks	PASS
6.4 Inspect engine components for missing clamps	PASS
6.5 Inspect exhaust systemfor signs of leaks, loose bolts or missing clamps	PASS
6.6 Inspect turbo for security and signs of leaks	PASS
6.7 Inspect condition of exhaust lagging	PASS
6.8 Inspect engine mounts for condition and loose hardware	PASS
6.9 Inspect alternator mount condition and adjustment	PASS
6.10 Inspect wiring condition and security	PASS
6.11 Inspect engine belts	PASS
PM ENGINE COOLINGSYSTEM	
7.1 Check coolant level	PASS
7.2 Check condition of radiator cap	PASS
7.3 Check condition of radiator core	PASS
7.4 Check cooling systemfor signs of leaks	PASS
7.5 Check hose and clamp condition	PASS
7.6 Inspect fan condition and operation	PASS
7.7 Inspect radiator and fan guard condition	PASS

Severity Report Serial Number: RAZ10993 Asset ID: AHSH79 Page 3 of 7



PM SWINGTRANSMISSION	
	D400
8.1 Inspect swing transmission for signs of leaks	PASS
8.2 Inspect swing transmission oil level	PASS
PM HYDRAULIC SYSTEM	
9.1 Check hydraulic oil level	PASS
9.2 Inspect hydraulic cylinders for leaks and security	PASS
J.Z mopest nyaraans symmens for leaks and sesarity	77100
9.3 Inspect hydraulic hoses for leaks, damage, security	PASS
9.4 Inspect hydraulic pump condition, leaks, security	PASS
9.5 Check Pilot Accumulator operation as per OEM Maintenance Procedure - Test	PASS
Boom Down Functionality with engine off	FAGG
PM FINAL DRIVES	
10.1 Inspect LHS final drive mount condition for leaks and security	PASS
- 1011 mopost 2110 milar arrive meant contained for loake and cocartsy	
 10.2 Inspect LHS oil level and mag plug condition 	PASS
10.3 Inspect RHS final drive mount condition for leaks and security	PASS
10.4 Inspect RHS oil level and mag plug condition	PASS
10.4 Inspect Kilo on level and may plug condition	7 700
PM UNDERCARRIAGE	
11.1 Inspect LHS track tension	PASS
11.2 Inchest BUS trock tonsion	PASS PASS
11.2 Inspect RHS track tension	PASS
11.3 Inspect tracks for loose/missing bolts	PASS
11.4 Inspect load and carrier rollers for signs of leaks	PASS
44 E Inament idlama for pinna of lastes	DACC
11.5 Inspect idlers for signs of leaks	PASS
11.6 Inspect sprocket segments condition	PASS
 11.7 Inspect track frame for cracks, lose or missing hardware 	PASS

Severity Report Serial Number: RAZ10993 Asset ID: AHSH79 Page 4 of 7



PM FRAME AND BODY	
12.1 Check panels for damage and security	PASS
12.2 Check access steps and walkway condition	PASS
 12.3 Inspect boom condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication 	PASS
 12.4 Inspect stick condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication 	PASS
12.5 Inspect quick hitch condition and operation	PASS
12.6 Inspect bucket condition – cracks, wear, damage, mounts	PASS
12.7 Inspect GET condition and hardware	N/A
PM ELECTRICAL SYSTEM	
13.1 Check battery condition	PASS
13.2 Check battery terminal condition	PASS
13.3 Check battery security	PASS
13.4 Check battery box drain is clear	PASS
13.5 Check wiring condition and security	PASS
PM GREASE SYSTEM	
14.1 Check all points for acceptable lubrication	PASS
14.2 Inspect grease systemoperation	PASS
14.3 Check grease line condition	PASS
14.4 Refill grease tank	N/A
14.5 Lubricate bucket linkage	PASS
14.6 Lubricate blade linkage	N/A
14.7 Lubricate boom& stick linkage	PASS

Severity Report Serial Number: RAZ10993 Asset ID: AHSH79 Page 5 of 7



14.8 Lubricate swing bearing	PASS
PM OPERATOR STATION	
15.1 Check all doors for correct opening and closing adjustments and operation	PASS
15.2 Inspect condition of door seals	PASS
15.3 Check window glass and seal condition	PASS
15.4 Check mirror condition and adjustments	PASS
15.5 Fill window washer reservoir	PASS
15.6 Inspect air con vents condition	PASS
15.7 Inspect seat belt and mounting hardware	PASS
15.8 Inspect seat condition, operation and mounting	PASS
15.9 Replace cabin A/C filter	PASS
OIL SAMPLING	
16.1 Engine	PASS
PM POST SERVICE INSPECTION CHECKS	
17.1 All inspections have been completed and rectified as required	PASS
17.2 All safety related defects have been repaired or reported	PASS
17.3 All defects have been noted and reported	PASS
17.4 All fluids are at correct level and drain plugs tight	PASS
 17.5 All oil samples have visually been inspected and any notable signs of contamination have been reported 	PASS
17.6 All replaced filters have been cut and inspected and photos added to CAT Inspect and reported to supervisor	PASS
17.7 Machine has been recommissioned and ready for operation	PASS
17.8 PM service notification marked off in Vision Link	PASS

Severity Report Serial Number: RAZ10993 Asset ID: AHSH79 Page 6 of 7



DEFECTS IDENTIFIED

18.1 DEFECTS IDENTIFIED

3 x joystick buttons failed and require replacement, coolant leak at thermostat housing

OIL USED	
19.1 Hydraulic oil	140
19.2 Engine oil	29
19.3 Slew oil	18
19.4 Gear oil	18
19.5 Coolant	7
Site photo	

Severity Report Serial Number: RAZ10993 Asset ID: AHSH79 Page 7 of 7