

Ingleburn NSW 2565

KUBOTA EXCAVATOR U55

Minor Service

14 84

9

Inspection Number

Serial Number

RP055669

Customer No

Customer Name

200000

AUSTRALIAN HAMMER

SUPPLIES HIRE

Make

KUBOTA

Model

U55-4

25500

Equipment Family

4.1-6T HYDRAULIC EXCAVATOR

Asset ID

AHSH142

Location

AUSTRAILAN HAMMER SUPPLIES HIRE

Unit 3/32 WILLIAMSON RD

INGLEBURN

land

2565

Customer Email

Works Order

RP055669

Completed On

27/11/2025 1:54:39 PM

Inspector

Next Meter

Etienne Llanos

Machine Hours

PDF Generated On 27/11/2025

2256.51

2312

Customer

General Info & Comments


Serial Number: 25500 Asset ID: AHSH142 Severity Report Page 1 of 7



General Info/Comments

250hr at 2250



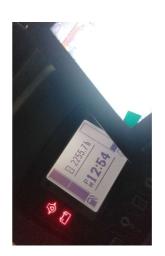



TASK SAFETY INSTRUCTIONS	
1.1 Wear Correct PPE at all times	PASS
1.2 All isolation and safe work procedures must be followed	PASS
1.3 Identify task hazards and controls utilising hierarchy or controls model	PASS
1.4 Ensure a competent operator and spotter is utilised to move mobile equipment	PASS
1.5 Ensure all mobile equipment is fundamentally stable	PASS
1.6 Ensure three points of contact is maintained during access and egress	PASS
1.7 Ensure acceptable housekeeping standards are maintained at all times	PASS

MACHINE GENERAL RUNNINGCHECKS

Severity Report Serial Number: 25500 Asset ID: AHSH142 Page 2 of 7



	2.1 Check all work lights, beacon & reverse alarmfor operation	NORMAL
	2.2 Test all dash warning lights, gauges and audible alarms for correct operation	NORMAL
	2.3 Check idle timer for correct shut down operation	NORMAL
	2.4 Check operation of all three emergency stop buttons	NORMAL
	2.5 Check operation of horn	NORMAL
	2.6 Check operation of reverse camera	NORMAL
	2.7 Check alternator charge voltage	NORMAL
	2.8 Check operation of auto grease systemby manually activating timer	N/A
	2.9 Check fire systemcontrol panel for 'Normal'	N/A
P	M FIRE SUPPRESSION SYSTEM	
	5.1 Ensure fire suppression bottle and components are securely mounted and in good condition	N/A
0	5.2 Ensure fire suppression is correctly charged	N/A
	5.3 Inspect last charge date	DATE:2025-11- 27T00:00:00. 0000000
	5.4 Check all fire extinguishers are securely mounted and in good condition	PASS
	5.5 Check all fire extinguishers are correctly charged	PASS
	5.6 Inspect last charge date	DATE:2025-11- 27T00:00:00. 0000000
P	M ENGINE	
<u> </u>	6.1 Performengine valve set	N/A
	6.2 Inspect air intake systemhoses, pipes, clamps for signs of dirt ingress	NORMAL
	6.3 Inspect engine for oil or fuel leaks	NORMAL
	6.4 Inspect engine components for missing clamps	NORMAL

Severity Report Serial Number: 25500 Asset ID: AHSH142 Page 3 of 7



	6.5 Inspect exhaust systemfor signs of leaks, loose bolts or missing clamps	NORMAL
	6.6 Inspect turbo for security and signs of leaks	NORMAL
	6.7 Inspect condition of exhaust lagging	NORMAL
	6.8 Inspect engine mounts for condition and loose hardware	NORMAL
	6.9 Inspect alternator mount condition and adjustment	NORMAL
	6.10 Inspect wiring condition and security	NORMAL
	6.11 Inspect engine belts	FAIL
PI	M ENGINE COOLINGSYSTEM	
	7.1 Check coolant level	PASS
	7.2 Check condition of radiator cap	PASS
	7.3 Check condition of radiator core	PASS
	7.4 Check cooling systemfor signs of leaks	PASS
	7.5 Check hose and clamp condition	PASS
	7.6 Inspect fan condition and operation	PASS
	7.7 Inspect radiator and fan guard condition	PASS
PI	M SWINGTRANSMISSION	
	8.1 Inspect swing transmission for signs of leaks	NORMAL
	8.2 Inspect swing transmission oil level	NORMAL
PI	M HYDRAULIC SYSTEM	
	9.1 Check hydraulic oil level	NORMAL
	9.2 Inspect hydraulic cylinders for leaks and security	NORMAL
	9.3 Inspect hydraulic hoses for leaks, damage, security	NORMAL
	9.4 Inspect hydraulic pump condition, leaks, security	NORMAL

Asset ID: AHSH142

Page 4 of 7

Serial Number: 25500



9.5 Check Pilot Accumulator operation as per OEM Maintenance Procedure - Test

Australian Hammer Supplies Hire Unit 3/32 Williamson Road Ingleburn NSW 2565

PASS

	Boom Down Functionality with engine off	FASS
PI	// FINAL DRIVES	
•	10.1 Inspect LHS final drive mount condition for leaks and security	NORMAL
	10.2 Inspect LHS oil level and mag plug condition	NORMAL
	10.3 Inspect RHS final drive mount condition for leaks and security	NORMAL
	10.4 Inspect RHS oil level and mag plug condition	NORMAL
PI	/I UNDERCARRIAGE	
•	11.1 Inspect LHS track tension	PASS
	11.2 Inspect RHS track tension	PASS
•	11.3 Inspect tracks for loose/missing bolts	NORMAL
	11.4 Inspect load and carrier rollers for signs of leaks	NORMAL
•	11.5 Inspect idlers for signs of leaks	NORMAL
•	11.6 Inspect sprocket segments condition	NORMAL
	11.7 Inspect track frame for cracks, lose or missing hardware	NORMAL
Pl	// FRAME AND BODY	
•	12.1 Check panels for damage and security	NORMAL
•	12.2 Check access steps and walkway condition	NORMAL
	12.3 Inspect boom condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication	NORMAL
	12.4 Inspect stick condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication	NORMAL
	12.5 Inspect quick hitch condition and operation	NORMAL
	12.6 Inspect bucket condition – cracks, wear, damage, mounts	NORMAL
	12.7 Inspect GET condition and hardware	NORMAL

Asset ID: AHSH142

Page 5 of 7

Serial Number: 25500



13.1 Check battery condition NORMAL 13.2 Check battery terminal condition NORMAL 13.3 Check battery security NORMAL 13.4 Check battery security NORMAL 13.5 Check wiring condition and security NORMAL 13.5 Check wiring condition and security NORMAL 14.1 Check all points for acceptable lubrication PASS 14.2 Inspect grease systemoperation NA 14.3 Check grease line condition NORMAL 14.4 Refill grease tank NA 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate blade linkage NORMAL 14.8 Lubricate swing bearing NORMAL 14.9 Lubricate swing bearing NORMAL 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	PM ELECTRICAL SYSTEM	
13.3 Check battery security 13.4 Check battery box drain is clear NORMAL 13.5 Check wiring condition and security NORMAL 13.5 Check wiring condition and security NORMAL 14.1 Check all points for acceptable lubrication PASS 14.2 Inspect grease systemoperation NA 14.3 Check grease line condition NORMAL 14.4 Refill grease tank NA 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition	13.1 Check battery condition	NORMAL
13.4 Check battery box drain is clear 13.5 Check wiring condition and security NORMAL 13.5 Check wiring condition and security NORMAL PM GREASE SYSTEM 14.1 Check all points for acceptable lubrication PASS 14.2 Inspect grease systemoperation NORMAL 14.3 Check grease line condition NORMAL 14.4 Refill grease tank NA 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition	13.2 Check battery terminal condition	NORMAL
13.5 Check wiring condition and security PM GREASE SYSTEM 14.1 Check all points for acceptable lubrication PASS 14.2 Inspect grease systemoperation NA 14.3 Check grease line condition NORMAL 14.4 Refill grease tank NA 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	13.3 Check battery security	NORMAL
PM GREASE SYSTEM 14.1 Check all points for acceptable lubrication PASS 14.2 Inspect grease systemoperation N/A 14.3 Check grease line condition NORMAL 14.4 Refill grease tank N/A 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition	13.4 Check battery box drain is clear	NORMAL
14.1 Check all points for acceptable lubrication PASS 14.2 Inspect grease systemoperation N/A 14.3 Check grease line condition NORMAL 14.4 Refill grease tank N/A 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	13.5 Check wiring condition and security	NORMAL
14.2 Inspect grease systemoperation 14.3 Check grease line condition NORMAL 14.4 Refill grease tank N/A 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	PM GREASE SYSTEM	
14.3 Check grease line condition 14.4 Refill grease tank N/A 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	14.1 Check all points for acceptable lubrication	PASS
14.4 Refill grease tank 14.5 Lubricate bucket linkage NORMAL 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	14.2 Inspect grease systemoperation	N/A
14.5 Lubricate bucket linkage 14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	14.3 Check grease line condition	NORMAL
14.6 Lubricate blade linkage NORMAL 14.7 Lubricate boom& stick linkage NORMAL 14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	14.4 Refill grease tank	N/A
14.7 Lubricate boom& stick linkage 14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	14.5 Lubricate bucket linkage	NORMAL
14.8 Lubricate swing bearing NORMAL PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition	14.6 Lubricate blade linkage	NORMAL
PM OPERATOR STATION 15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	14.7 Lubricate boom& stick linkage	NORMAL
15.1 Check all doors for correct opening and closing adjustments and operation PASS 15.2 Inspect condition of door seals PASS 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	14.8 Lubricate swing bearing	NORMAL
15.2 Inspect condition of door seals 15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	PM OPERATOR STATION	
15.3 Check window glass and seal condition PASS 15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	15.1 Check all doors for correct opening and closing adjustments and operation	PASS
15.4 Check mirror condition and adjustments PASS 15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	15.2 Inspect condition of door seals	PASS
15.5 Fill window washer reservoir PASS 15.6 Inspect air con vents condition PASS	15.3 Check window glass and seal condition	PASS
15.6 Inspect air con vents condition PASS	15.4 Check mirror condition and adjustments	PASS
	15.5 Fill window washer reservoir	PASS
● 15.7 Inspect seat belt and mounting hardware PASS	15.6 Inspect air con vents condition	PASS
	15.7 Inspect seat belt and mounting hardware	PASS

Asset ID: AHSH142

Page 6 of 7

Serial Number: 25500



	15.8 Inspect seat condition, operation and mounting	PASS
	15.9 Replace cabin A/C filter	NORMAL
OI	L SAMPLING	
	16.1 Engine	PASS
ΡN	I POST SERVICE INSPECTION CHECKS	
	17.1 All inspections have been completed and rectified as required	PASS
	17.2 All safety related defects have been repaired or reported	PASS
	17.3 All defects have been noted and reported	PASS
	17.4 All fluids are at correct level and drain plugs tight	PASS
	17.5 All oil samples have visually been inspected and any notable signs of contamination have been reported	PASS
	17.6 All replaced filters have been cut and inspected and photos added to CAT Inspect and reported to supervisor	N/A
	17.7 Machine has been recommissioned and ready for operation	PASS
	17.8 PM service notification marked off in Vision Link	N/A
DE	FECTS IDENTIFIED	
	18.1 DEFECTS IDENTIFIED	engine belts cracked and stretched, need new ones
OI	L USED	
	19.1 Hydraulic oil	0
	19.2 Engine oil	10.5
	19.3 Slew oil	0
	19.4 Gear oil	0
	19.5 Coolant	0

Asset ID: AHSH142

Page 7 of 7

Serial Number: 25500