



**Australian Hammer Supplies Hire**  
32 Williamson Rd  
Ingleburn  
NSW 2565

## Minor Service

**RP051742**

Customer AUSTRALIAN HAMMER SUPPLIES HIRE Resource Collin Graham  
Contact

Address AUSTRALIAN HAMMER SUPPLIES HIRE Unit 3/32 WILLIAMSON RD  
INGLEBURN 2565  
Job Type Minor Service  
Reference  
Date 2025-08-11 08:57 - 09:03  
Job duration 2:00:00  
Driving duration 00:00:00  
Distance travelled 0 km

Notes AHS156 4250HR MINOR SERVICE - After 9am - Please call day before to confirm. Need to have SWMS when you attend.  
Site Address - 391 Jenolan Caves Road Hartley  
Site contact - Craig - 0405 123 700

Customer/Technician

Resource notes

## Minor Service

### Answer

### Notes

**General Info/Comments** 250hr service

**Machine Hours** 4457

**Next Service Due Hours** 4750

**1.1 Wear Correct PPE at all times** PASS

**1.2 All isolation and safe work procedures must be followed** PASS

**1.3 Identify task hazards and controls utilising hierarchy or controls model** PASS

**1.4 Ensure a competent operator and spotter is utilised to move mobile equipment** PASS

**1.5 Ensure all mobile equipment is fundamentally stable** PASS

**1.6 Ensure three points of contact is maintained** PASS

during access and egress

1.7 Ensure acceptable housekeeping standards are maintained at all times PASS

2.1 Check all work lights, beacon & reverse alarm for operation PASS

2.2 Test all dash warning lights, gauges and audible alarms for correct operation PASS

2.3 Check idle timer for correct shut down operation PASS

2.4 Check operation of all three emergency stop buttons PASS

2.5 Check operation of horn PASS

2.6 Check operation of reverse camera PASS

2.7 Check alternator charge voltage - ACTUAL \_\_\_\_\_ V PASS

2.8 Check operation of auto grease system by manually activating timer N/A

2.9 Check fire system control panel for 'Normal' N/A

5.1 Ensure fire suppression bottle and components are securely mounted and in good condition N/A

5.2 Ensure fire suppression is correctly charged N/A

5.3 Inspect last charge date - ACTUAL N/A

5.4 Check all fire extinguishers are securely mounted and in good condition PASS

5.5 Check all fire extinguishers are correctly charged PASS

5.6 Inspect last charge date - ACTUAL PASS

6.1 Perform engine valve set N/A

6.2 Inspect air intake system hoses, pipes, clamps for signs of dirt ingress PASS

6.3 Inspect engine for oil or fuel leaks PASS

6.4 Inspect engine components for missing clamps PASS

6.5 Inspect exhaust system for signs of leaks, loose bolts or missing clamps PASS

6.6 Inspect turbo for security and signs of leaks PASS

6.7 Inspect condition of exhaust lagging PASS

6.8 Inspect engine mounts for condition and loose hardware PASS

6.9 Inspect alternator mount condition and adjustment PASS

|                                                                                                                       |      |
|-----------------------------------------------------------------------------------------------------------------------|------|
| 6.10 Inspect wiring condition and security                                                                            | PASS |
| 6.11 Inspect engine belts                                                                                             | PASS |
| 7.1 Check coolant level                                                                                               | PASS |
| 7.2 Check condition of radiator cap                                                                                   | PASS |
| 7.3 Check condition of radiator core                                                                                  | PASS |
| 7.4 Check cooling system for signs of leaks                                                                           | PASS |
| 7.5 Check hose and clamp condition                                                                                    | PASS |
| 7.6 Inspect fan condition and operation                                                                               | PASS |
| 7.7 Inspect radiator and fan guard condition                                                                          | PASS |
| 8.1 Inspect swing transmission for signs of leaks                                                                     | PASS |
| 8.2 Inspect swing transmission oil level                                                                              | PASS |
| 9.1 Check hydraulic oil level                                                                                         | PASS |
| 9.2 Inspect hydraulic cylinders for leaks and security                                                                | PASS |
| 9.3 Inspect hydraulic hoses for leaks, damage, security                                                               | PASS |
| 9.4 Inspect hydraulic pump condition, leaks, security                                                                 | PASS |
| 9.5 Check Pilot Accumulator operation as per OEM Maintenance Procedure - Test Boom Down Functionality with engine off | PASS |
| 10.1 Inspect LHS final drive mount condition for leaks and security                                                   | PASS |
| 10.2 Inspect LHS oil level and mag plug condition                                                                     | PASS |
| 10.3 Inspect RHS final drive mount condition for leaks and security                                                   | PASS |
| 10.4 Inspect RHS oil level and mag plug condition                                                                     | PASS |
| 11.1 Inspect LHS track tension                                                                                        | PASS |
| 11.2 Inspect RHS track tension                                                                                        | PASS |
| 11.3 Inspect tracks for loose/missing bolts                                                                           | PASS |
| 11.4 Inspect load and carrier rollers for signs of leaks                                                              | PASS |
| 11.5 Inspect idlers for signs of leaks                                                                                | PASS |
| 11.6 Inspect sprocket segments condition                                                                              | PASS |
| 11.7 Inspect track frame for cracks, lose or missing hardware                                                         | PASS |
| 12.1 Check panels for damage and security                                                                             | PASS |
| 12.2 Check access steps and walkway condition                                                                         | PASS |

|                                                                                                             |             |
|-------------------------------------------------------------------------------------------------------------|-------------|
| <b>12.3 Inspect boom condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication</b> | <b>PASS</b> |
|-------------------------------------------------------------------------------------------------------------|-------------|

|                                                                                                              |             |
|--------------------------------------------------------------------------------------------------------------|-------------|
| <b>12.4 Inspect stick condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication</b> | <b>PASS</b> |
|--------------------------------------------------------------------------------------------------------------|-------------|

|                                                         |             |
|---------------------------------------------------------|-------------|
| <b>12.5 Inspect quick hitch condition and operation</b> | <b>PASS</b> |
|---------------------------------------------------------|-------------|

|                                                                     |             |
|---------------------------------------------------------------------|-------------|
| <b>12.6 Inspect bucket condition – cracks, wear, damage, mounts</b> | <b>PASS</b> |
|---------------------------------------------------------------------|-------------|

|                                                |             |
|------------------------------------------------|-------------|
| <b>12.7 Inspect GET condition and hardware</b> | <b>PASS</b> |
|------------------------------------------------|-------------|

|                                     |             |
|-------------------------------------|-------------|
| <b>13.1 Check battery condition</b> | <b>PASS</b> |
|-------------------------------------|-------------|

|                                              |             |
|----------------------------------------------|-------------|
| <b>13.2 Check battery terminal condition</b> | <b>PASS</b> |
|----------------------------------------------|-------------|

|                                    |             |
|------------------------------------|-------------|
| <b>13.3 Check battery security</b> | <b>PASS</b> |
|------------------------------------|-------------|

|                                              |             |
|----------------------------------------------|-------------|
| <b>13.4 Check battery box drain is clear</b> | <b>PASS</b> |
|----------------------------------------------|-------------|

|                                                 |             |
|-------------------------------------------------|-------------|
| <b>13.5 Check wiring condition and security</b> | <b>PASS</b> |
|-------------------------------------------------|-------------|

|                                                         |             |
|---------------------------------------------------------|-------------|
| <b>14.1 Check all points for acceptable lubrication</b> | <b>PASS</b> |
|---------------------------------------------------------|-------------|

|                                             |             |
|---------------------------------------------|-------------|
| <b>14.2 Inspect grease system operation</b> | <b>PASS</b> |
|---------------------------------------------|-------------|

|                                         |             |
|-----------------------------------------|-------------|
| <b>14.3 Check grease line condition</b> | <b>PASS</b> |
|-----------------------------------------|-------------|

|                                |            |
|--------------------------------|------------|
| <b>14.4 Refill grease tank</b> | <b>N/A</b> |
|--------------------------------|------------|

|                                      |             |
|--------------------------------------|-------------|
| <b>14.5 Lubricate bucket linkage</b> | <b>PASS</b> |
|--------------------------------------|-------------|

|                                     |            |
|-------------------------------------|------------|
| <b>14.6 Lubricate blade linkage</b> | <b>N/A</b> |
|-------------------------------------|------------|

|                                               |             |
|-----------------------------------------------|-------------|
| <b>14.7 Lubricate boom&amp; stick linkage</b> | <b>PASS</b> |
|-----------------------------------------------|-------------|

|                                     |             |
|-------------------------------------|-------------|
| <b>14.8 Lubricate swing bearing</b> | <b>PASS</b> |
|-------------------------------------|-------------|

|                                                                                       |             |
|---------------------------------------------------------------------------------------|-------------|
| <b>15.1 Check all doors for correct opening and closing adjustments and operation</b> | <b>PASS</b> |
|---------------------------------------------------------------------------------------|-------------|

|                                             |             |
|---------------------------------------------|-------------|
| <b>15.2 Inspect condition of door seals</b> | <b>PASS</b> |
|---------------------------------------------|-------------|

|                                                   |             |
|---------------------------------------------------|-------------|
| <b>15.3 Check window glass and seal condition</b> | <b>PASS</b> |
|---------------------------------------------------|-------------|

|                                                    |             |
|----------------------------------------------------|-------------|
| <b>15.4 Check mirror condition and adjustments</b> | <b>PASS</b> |
|----------------------------------------------------|-------------|

|                                          |             |
|------------------------------------------|-------------|
| <b>15.5 Fill window washer reservoir</b> | <b>PASS</b> |
|------------------------------------------|-------------|

|                                             |             |
|---------------------------------------------|-------------|
| <b>15.6 Inspect air con vents condition</b> | <b>PASS</b> |
|---------------------------------------------|-------------|

|                                                     |             |
|-----------------------------------------------------|-------------|
| <b>15.7 Inspect seat belt and mounting hardware</b> | <b>PASS</b> |
|-----------------------------------------------------|-------------|

|                                                            |             |
|------------------------------------------------------------|-------------|
| <b>15.8 Inspect seat condition, operation and mounting</b> | <b>PASS</b> |
|------------------------------------------------------------|-------------|

|                                      |            |
|--------------------------------------|------------|
| <b>15.9 Replace cabin A/C filter</b> | <b>N/A</b> |
|--------------------------------------|------------|

|                    |             |
|--------------------|-------------|
| <b>16.1 Engine</b> | <b>PASS</b> |
|--------------------|-------------|

|                                                                           |             |
|---------------------------------------------------------------------------|-------------|
| <b>17.1 All inspections have been completed and rectified as required</b> | <b>PASS</b> |
|---------------------------------------------------------------------------|-------------|

|                                                              |             |
|--------------------------------------------------------------|-------------|
| <b>17.2 All safety related defects have been repaired or</b> | <b>PASS</b> |
|--------------------------------------------------------------|-------------|



**Australian Hammer Supplies Hire**  
32 Williamson Rd  
Ingleburn  
NSW 2565

reported

|                                               |      |
|-----------------------------------------------|------|
| 17.3 All defects have been noted and reported | PASS |
|-----------------------------------------------|------|

|                                                            |      |
|------------------------------------------------------------|------|
| 17.4 All fluids are at correct level and drain plugs tight | PASS |
|------------------------------------------------------------|------|

|                                                                                                             |      |
|-------------------------------------------------------------------------------------------------------------|------|
| 17.5 All oil samples have visually been inspected and any notable signs of contamination have been reported | PASS |
|-------------------------------------------------------------------------------------------------------------|------|

|                                                                                                                  |      |
|------------------------------------------------------------------------------------------------------------------|------|
| 17.6 All replaced filters have been cut and inspected and photos added to CAT Inspect and reported to supervisor | PASS |
|------------------------------------------------------------------------------------------------------------------|------|

|                                                              |      |
|--------------------------------------------------------------|------|
| 17.7 Machine has been recommissioned and ready for operation | PASS |
|--------------------------------------------------------------|------|

|                                                        |      |
|--------------------------------------------------------|------|
| 17.8 PM service notification marked off in Vision Link | PASS |
|--------------------------------------------------------|------|

|                         |      |
|-------------------------|------|
| 18.1 DEFECTS IDENTIFIED | PASS |
|-------------------------|------|

|                    |   |
|--------------------|---|
| 19.1 Hydraulic oil | 1 |
|--------------------|---|

|                  |   |
|------------------|---|
| 19.2 Enggine oil | 0 |
|------------------|---|

|               |   |
|---------------|---|
| 19.3 Slew oil | 0 |
|---------------|---|

|               |   |
|---------------|---|
| 19.4 Gear oil | 0 |
|---------------|---|

## Site photo



## General Info/Comments



## General Info/Comments

