

## KUBOTA EXCAVATOR KX080

### Minor Service

0 13 85 9

Inspection Number RP056971

Customer No 200000

Serial Number 28779

Customer Name AUSTRALIAN HAMMER  
SUPPLIES HIRE

Make KUBOTA

Customer Email

Model KX080-3

Works Order RP056971

Equipment Family 8.1-11.5T HYDRAULIC EXCAVATOR

Completed On 3/02/2026 9:14:49 AM

Asset ID AHS171

Inspector Etienne Llanos

Location AUSTRALIAN HAMMER SUPPLIES HIRE  
Unit 3/32 WILLIAMSON RD  
INGLEBURN  
2565

PDF Generated On 03/02/2026

Machine Hours 1793

Customer



Next Meter 1772

### General Info & Comments

#### General Info/Comments

250hr at 1750



### TASK SAFETY INSTRUCTIONS

#### 1.1 Wear Correct PPE at all times

PASS

#### 1.2 All isolation and safe work procedures must be followed

PASS

|   |                                                                                  |      |
|---|----------------------------------------------------------------------------------|------|
| ● | 1.3 Identify task hazards and controls utilising hierarchy or controls model     | PASS |
| ● | 1.4 Ensure a competent operator and spotter is utilised to move mobile equipment | PASS |
| ● | 1.5 Ensure all mobile equipment is fundamentally stable                          | PASS |
| ● | 1.6 Ensure three points of contact is maintained during access and egress        | PASS |
| ● | 1.7 Ensure acceptable housekeeping standards are maintained at all times         | PASS |

## MACHINE GENERAL RUNNINGCHECKS

|   |                                                                                   |      |
|---|-----------------------------------------------------------------------------------|------|
| ● | 2.1 Check all work lights, beacon & reverse alarmfor operation                    | PASS |
| ● | 2.2 Test all dash warning lights, gauges and audible alarms for correct operation | PASS |
| ● | 2.3 Check idle timer for correct shut down operation                              | PASS |
| ● | 2.4 Check operation of all three emergency stop buttons                           | PASS |
| ● | 2.5 Check operation of horn                                                       | PASS |
| ● | 2.6 Check operation of reverse camera                                             | PASS |
| ● | 2.7 Check alternator charge voltage                                               | PASS |
| ● | 2.8 Check operation of auto grease systemby manually activating timer             | N/A  |
| ● | 2.9 Check fire systemcontrol panel for 'Normal'                                   | N/A  |

## PM FIRE SUPPRESSION SYSTEM

|   |                                                                                              |                                 |
|---|----------------------------------------------------------------------------------------------|---------------------------------|
| ● | 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition | N/A                             |
| ● | 5.2 Ensure fire suppression is correctly charged                                             | N/A                             |
| ● | 5.3 Inspect last charge date                                                                 | DATE:2026-02-03T00:00:00.000000 |
| ● | 5.4 Check all fire extinguishers are securely mounted and in good condition                  | PASS                            |
| ● | 5.5 Check all fire extinguishers are correctly charged                                       | PASS                            |

|                                     |                                         |
|-------------------------------------|-----------------------------------------|
| <b>5.6 Inspect last charge date</b> | <i>DATE:2026-02-03T00:00:00.0000000</i> |
|-------------------------------------|-----------------------------------------|

#### PM ENGINE

|                                                                                    |             |
|------------------------------------------------------------------------------------|-------------|
| <b>6.1 Performengine valve set</b>                                                 | <i>N/A</i>  |
| <b>6.2 Inspect air intake systemhoses, pipes, clamps for signs of dirt ingress</b> | <i>PASS</i> |
| <b>6.3 Inspect engine for oil or fuel leaks</b>                                    | <i>PASS</i> |
| <b>6.4 Inspect engine components for missing clamps</b>                            | <i>PASS</i> |
| <b>6.5 Inspect exhaust systemfor signs of leaks, loose bolts or missing clamps</b> | <i>PASS</i> |
| <b>6.6 Inspect turbo for security and signs of leaks</b>                           | <i>PASS</i> |
| <b>6.7 Inspect condition of exhaust lagging</b>                                    | <i>PASS</i> |
| <b>6.8 Inspect engine mounts for condition and loose hardware</b>                  | <i>PASS</i> |
| <b>6.9 Inspect alternator mount condition and adjustment</b>                       | <i>PASS</i> |
| <b>6.10 Inspect wiring condition and security</b>                                  | <i>PASS</i> |
| <b>6.11 Inspect engine belts</b>                                                   | <i>PASS</i> |

#### PM ENGINE COOLINGSYSTEM

|                                                     |             |
|-----------------------------------------------------|-------------|
| <b>7.1 Check coolant level</b>                      | <i>PASS</i> |
| <b>7.2 Check condition of radiator cap</b>          | <i>PASS</i> |
| <b>7.3 Check condition of radiator core</b>         | <i>PASS</i> |
| <b>7.4 Check cooling systemfor signs of leaks</b>   | <i>PASS</i> |
| <b>7.5 Check hose and clamp condition</b>           | <i>PASS</i> |
| <b>7.6 Inspect fan condition and operation</b>      | <i>PASS</i> |
| <b>7.7 Inspect radiator and fan guard condition</b> | <i>PASS</i> |

#### PM SWINGTRANSMISSION

|                                                     |      |
|-----------------------------------------------------|------|
| ● 8.1 Inspect swing transmission for signs of leaks | PASS |
|-----------------------------------------------------|------|

|                                            |      |
|--------------------------------------------|------|
| ● 8.2 Inspect swing transmission oil level | PASS |
|--------------------------------------------|------|

## PM HYDRAULIC SYSTEM

|                                 |      |
|---------------------------------|------|
| ● 9.1 Check hydraulic oil level | PASS |
|---------------------------------|------|

|                                                          |      |
|----------------------------------------------------------|------|
| ● 9.2 Inspect hydraulic cylinders for leaks and security | PASS |
|----------------------------------------------------------|------|

|                                                           |      |
|-----------------------------------------------------------|------|
| ● 9.3 Inspect hydraulic hoses for leaks, damage, security | PASS |
|-----------------------------------------------------------|------|

|                                                         |      |
|---------------------------------------------------------|------|
| ● 9.4 Inspect hydraulic pump condition, leaks, security | PASS |
|---------------------------------------------------------|------|

|                                                                                                                         |      |
|-------------------------------------------------------------------------------------------------------------------------|------|
| ● 9.5 Check Pilot Accumulator operation as per OEM Maintenance Procedure - Test Boom Down Functionality with engine off | PASS |
|-------------------------------------------------------------------------------------------------------------------------|------|

## PM FINAL DRIVES

|                                                                       |      |
|-----------------------------------------------------------------------|------|
| ● 10.1 Inspect LHS final drive mount condition for leaks and security | PASS |
|-----------------------------------------------------------------------|------|

|                                                     |      |
|-----------------------------------------------------|------|
| ● 10.2 Inspect LHS oil level and mag plug condition | PASS |
|-----------------------------------------------------|------|

|                                                                       |      |
|-----------------------------------------------------------------------|------|
| ● 10.3 Inspect RHS final drive mount condition for leaks and security | PASS |
|-----------------------------------------------------------------------|------|

|                                                     |      |
|-----------------------------------------------------|------|
| ● 10.4 Inspect RHS oil level and mag plug condition | PASS |
|-----------------------------------------------------|------|

## PM UNDERCARRIAGE

|                                  |      |
|----------------------------------|------|
| ● 11.1 Inspect LHS track tension | PASS |
|----------------------------------|------|

|                                  |      |
|----------------------------------|------|
| ● 11.2 Inspect RHS track tension | PASS |
|----------------------------------|------|

|                                               |      |
|-----------------------------------------------|------|
| ● 11.3 Inspect tracks for loose/missing bolts | PASS |
|-----------------------------------------------|------|

|                                                            |      |
|------------------------------------------------------------|------|
| ● 11.4 Inspect load and carrier rollers for signs of leaks | PASS |
|------------------------------------------------------------|------|

|                                          |      |
|------------------------------------------|------|
| ● 11.5 Inspect idlers for signs of leaks | PASS |
|------------------------------------------|------|

|                                            |      |
|--------------------------------------------|------|
| ● 11.6 Inspect sprocket segments condition | PASS |
|--------------------------------------------|------|

|                                                                 |      |
|-----------------------------------------------------------------|------|
| ● 11.7 Inspect track frame for cracks, lose or missing hardware | PASS |
|-----------------------------------------------------------------|------|

## PM FRAME AND BODY

|   |                                                                                                       |      |
|---|-------------------------------------------------------------------------------------------------------|------|
| ● | 12.1 Check panels for damage and security                                                             | PASS |
| ● | 12.2 Check access steps and walkway condition                                                         | PASS |
| ● | 12.3 Inspect boom condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication  | PASS |
| ● | 12.4 Inspect stick condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication | PASS |
| ● | 12.5 Inspect quick hitch condition and operation                                                      | PASS |
| ● | 12.6 Inspect bucket condition – cracks, wear, damage, mounts                                          | PASS |
| ● | 12.7 Inspect GET condition and hardware                                                               | PASS |

## PM ELECTRICAL SYSTEM

|   |                                          |      |
|---|------------------------------------------|------|
| ● | 13.1 Check battery condition             | PASS |
| ● | 13.2 Check battery terminal condition    | PASS |
| ● | 13.3 Check battery security              | PASS |
| ● | 13.4 Check battery box drain is clear    | PASS |
| ● | 13.5 Check wiring condition and security | PASS |

## PM GREASE SYSTEM

|   |                                                  |      |
|---|--------------------------------------------------|------|
| ● | 14.1 Check all points for acceptable lubrication | PASS |
| ● | 14.2 Inspect grease system operation             | N/A  |
| ● | 14.3 Check grease line condition                 | PASS |
| ● | 14.4 Refill grease tank                          | N/A  |
| ● | 14.5 Lubricate bucket linkage                    | PASS |
| ● | 14.6 Lubricate blade linkage                     | PASS |
| ● | 14.7 Lubricate boom & stick linkage              | PASS |
| ● | 14.8 Lubricate swing bearing                     | PASS |

## PM OPERATOR STATION

|                                                                                  |        |
|----------------------------------------------------------------------------------|--------|
| ● 15.1 Check all doors for correct opening and closing adjustments and operation | PASS   |
| ● 15.2 Inspect condition of door seals                                           | PASS   |
| ● 15.3 Check window glass and seal condition                                     | PASS   |
| ● 15.4 Check mirror condition and adjustments                                    | PASS   |
| ● 15.5 Fill window washer reservoir                                              | PASS   |
| ● 15.6 Inspect air con vents condition                                           | PASS   |
| ● 15.7 Inspect seat belt and mounting hardware                                   | PASS   |
| ● 15.8 Inspect seat condition, operation and mounting                            | PASS   |
| ● 15.9 Replace cabin A/C filter                                                  | NORMAL |

## OIL SAMPLING

|               |      |
|---------------|------|
| ● 16.1 Engine | PASS |
|---------------|------|

## PM POST SERVICE INSPECTION CHECKS

|                                                                                                                    |      |
|--------------------------------------------------------------------------------------------------------------------|------|
| ● 17.1 All inspections have been completed and rectified as required                                               | PASS |
| ● 17.2 All safety related defects have been repaired or reported                                                   | PASS |
| ● 17.3 All defects have been noted and reported                                                                    | PASS |
| ● 17.4 All fluids are at correct level and drain plugs tight                                                       | PASS |
| ● 17.5 All oil samples have visually been inspected and any notable signs of contamination have been reported      | PASS |
| ● 17.6 All replaced filters have been cut and inspected and photos added to CAT Inspect and reported to supervisor | N/A  |
| ● 17.7 Machine has been recommissioned and ready for operation                                                     | PASS |
| ● 17.8 PM service notification marked off in Vision Link                                                           | N/A  |

## DEFECTS IDENTIFIED



**Australian Hammer Supplies Hire**  
Unit 3/32 Williamson Road  
Ingleburn  
NSW 2565

---

|                           |             |
|---------------------------|-------------|
| ● 18.1 DEFECTS IDENTIFIED | <i>none</i> |
|---------------------------|-------------|

---

|          |  |
|----------|--|
| OIL USED |  |
|----------|--|

|                      |           |
|----------------------|-----------|
| ● 19.1 Hydraulic oil | <i>0</i>  |
| ● 19.2 Engine oil    | <i>11</i> |
| ● 19.3 Slew oil      | <i>0</i>  |
| ● 19.4 Gear oil      | <i>2</i>  |
| ● 19.5 Coolant       | <i>.5</i> |