

KUBOTA SVL75 SKID STEER LOADER

Minor Service

● 1 ● 14 ● 75 ● 18

Inspection Number RP055990

Customer No 200000

Serial Number 18824

Customer Name AUSTRALIAN HAMMER
SUPPLIES HIRE

Make KUBOTA

Customer Email

Model SVL75-3C

Works Order RP055990

Equipment Family SKID STEER LOADER

Completed On 16/12/2025 1:36:19 PM

Asset ID AHS178

Inspector Collin Graham

Location AUSTRALIAN HAMMER SUPPLIES HIRE
Unit 3/32 WILLIAMSON RD
INGLEBURN
2565

PDF Generated On 16/12/2025

Machine Hours 1195

Next Meter 1445

Customer



General Info & Comments

● General Info/Comments

1195



TASK SAFETY INSTRUCTIONS

- | | |
|--|------|
| ● 1.1 Wear Correct PPE at all times | PASS |
| ● 1.2 All isolation and safe work procedures must be followed | PASS |
| ● 1.3 Identify task hazards and controls utilising hierarchy or controls model | PASS |
| ● 1.4 Ensure a competent operator and spotter is utilised to move mobile equipment | PASS |
| ● 1.5 Ensure all mobile equipment is fundamentally stable | PASS |
| ● 1.6 Ensure three points of contact is maintained during access and egress | PASS |
| ● 1.7 Ensure acceptable housekeeping standards are maintained at all times | PASS |

MACHINE GENERAL RUNNINGCHECKS

| | |
|---|------|
| ● 2.1 Check all work lights, beacon & reverse alarm for operation | PASS |
| ● 2.2 Test all dash warning lights, gauges and audible alarms for correct operation | PASS |
| ● 2.3 Check idle timer for correct shut down operation | PASS |
| ● 2.4 Check operation of all three emergency stop buttons | PASS |
| ● 2.5 Check operation of horn | PASS |
| ● 2.6 Check operation of reverse camera | PASS |
| ● 2.7 Check alternator charge voltage | PASS |
| ● 2.8 Check operation of auto grease system by manually activating timer | N/A |
| ● 2.9 Check fire system control panel for 'Normal' | N/A |

PM FIRE SUPPRESSION SYSTEM

| | |
|--|----------------------------------|
| ● 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition | N/A |
| ● 5.2 Ensure fire suppression is correctly charged | N/A |
| ● 5.3 Inspect last charge date | DATE:2025-12-16T00:00:00.0000000 |
| ● 5.4 Check all fire extinguishers are securely mounted and in good condition | PASS |
| ● 5.5 Check all fire extinguishers are correctly charged | PASS |
| ● 5.6 Inspect last charge date | DATE:2025-12-16T00:00:00.0000000 |

PM ENGINE

| | |
|--|------|
| ● 6.1 Perform engine valve set | N/A |
| ● 6.2 Inspect air intake system hoses, pipes, clamps for signs of dirt ingress | PASS |
| ● 6.3 Inspect engine for oil or fuel leaks | PASS |
| ● 6.4 Inspect engine components for missing clamps | PASS |

- | | |
|--|------|
| ● 6.5 Inspect exhaust system for signs of leaks, loose bolts or missing clamps | PASS |
| ● 6.6 Inspect turbo for security and signs of leaks | PASS |
| ● 6.7 Inspect condition of exhaust lagging | PASS |
| ● 6.8 Inspect engine mounts for condition and loose hardware | PASS |
| ● 6.9 Inspect alternator mount condition and adjustment | PASS |
| ● 6.10 Inspect wiring condition and security | PASS |
| ● 6.11 Inspect engine belts | PASS |

PM ENGINE COOLING SYSTEM

- | | |
|--|------|
| ● 7.1 Check coolant level | PASS |
| ● 7.2 Check condition of radiator cap | PASS |
| ● 7.3 Check condition of radiator core | PASS |
| ● 7.4 Check cooling system for signs of leaks | PASS |
| ● 7.5 Check hose and clamp condition | PASS |
| ● 7.6 Inspect fan condition and operation | PASS |
| ● 7.7 Inspect radiator and fan guard condition | PASS |

PM SWING TRANSMISSION

- | | |
|---|-----|
| ● 8.1 Inspect swing transmission for signs of leaks | N/A |
| ● 8.2 Inspect swing transmission oil level | N/A |

PM HYDRAULIC SYSTEM

- | | |
|---|------|
| ● 9.1 Check hydraulic oil level | PASS |
| ● 9.2 Inspect hydraulic cylinders for leaks and security | PASS |
| ● 9.3 Inspect hydraulic hoses for leaks, damage, security | PASS |
| ● 9.4 Inspect hydraulic pump condition, leaks, security | PASS |

● 9.5 Check Pilot Accumulator operation as per OEM Maintenance Procedure - Test Boom Down Functionality with engine off *PASS*

PM FINAL DRIVES

● 10.1 Inspect LHS final drive mount condition for leaks and security *PASS*

● 10.2 Inspect LHS oil level and mag plug condition *PASS*

● 10.3 Inspect RHS final drive mount condition for leaks and security *PASS*

● 10.4 Inspect RHS oil level and mag plug condition *PASS*

PM UNDERCARRIAGE

● 11.1 Inspect LHS track tension *PASS*

● 11.2 Inspect RHS track tension *PASS*

● 11.3 Inspect tracks for loose/missing bolts *PASS*

● 11.4 Inspect load and carrier rollers for signs of leaks *PASS*

● 11.5 Inspect idlers for signs of leaks *PASS*

● 11.6 Inspect sprocket segments condition *PASS*

● 11.7 Inspect track frame for cracks, lose or missing hardware *PASS*

PM FRAME AND BODY

● 12.1 Check panels for damage and security *PASS*

● 12.2 Check access steps and walkway condition *PASS*

● 12.3 Inspect boom condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication *N/A*

● 12.4 Inspect stick condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication *N/A*

● 12.5 Inspect quick hitch condition and operation *PASS*

● 12.6 Inspect bucket condition – cracks, wear, damage, mounts *N/A*

● 12.7 Inspect GET condition and hardware *N/A*

PM ELECTRICAL SYSTEM

| | | |
|----------------------------------|--|------|
| <input checked="" type="radio"/> | 13.1 Check battery condition | PASS |
| <input checked="" type="radio"/> | 13.2 Check battery terminal condition | PASS |
| <input checked="" type="radio"/> | 13.3 Check battery security | PASS |
| <input checked="" type="radio"/> | 13.4 Check battery box drain is clear | PASS |
| <input checked="" type="radio"/> | 13.5 Check wiring condition and security | PASS |

PM GREASE SYSTEM

| | | |
|----------------------------------|--|------|
| <input checked="" type="radio"/> | 14.1 Check all points for acceptable lubrication | PASS |
| <input type="radio"/> | 14.2 Inspect grease system operation | N/A |
| <input checked="" type="radio"/> | 14.3 Check grease line condition | PASS |
| <input type="radio"/> | 14.4 Refill grease tank | N/A |
| <input checked="" type="radio"/> | 14.5 Lubricate bucket linkage | PASS |
| <input type="radio"/> | 14.6 Lubricate blade linkage | N/A |
| <input checked="" type="radio"/> | 14.7 Lubricate boom & stick linkage | PASS |
| <input type="radio"/> | 14.8 Lubricate swing bearing | N/A |

PM OPERATOR STATION

| | | |
|----------------------------------|--|------|
| <input checked="" type="radio"/> | 15.1 Check all doors for correct opening and closing adjustments and operation | PASS |
| <input checked="" type="radio"/> | 15.2 Inspect condition of door seals | PASS |
| <input checked="" type="radio"/> | 15.3 Check window glass and seal condition | PASS |
| <input checked="" type="radio"/> | 15.4 Check mirror condition and adjustments | PASS |
| <input checked="" type="radio"/> | 15.5 Fill window washer reservoir | PASS |
| <input type="radio"/> | 15.6 Inspect air con vents condition | FAIL |
| <input checked="" type="radio"/> | 15.7 Inspect seat belt and mounting hardware | PASS |

15.8 Inspect seat condition, operation and mounting PASS

15.9 Replace cabin A/C filter N/A

OIL SAMPLING

16.1 Engine PASS

PM POST SERVICE INSPECTION CHECKS

17.1 All inspections have been completed and rectified as required PASS

17.2 All safety related defects have been repaired or reported PASS

17.3 All defects have been noted and reported PASS

17.4 All fluids are at correct level and drain plugs tight PASS

17.5 All oil samples have visually been inspected and any notable signs of contamination have been reported PASS

17.6 All replaced filters have been cut and inspected and photos added to CAT Inspect and reported to supervisor N/A

17.7 Machine has been recommissioned and ready for operation PASS

17.8 PM service notification marked off in Vision Link N/A

DEFECTS IDENTIFIED

18.1 DEFECTS IDENTIFIED *na*

OIL USED

19.1 Hydraulic oil 0

19.2 Engine oil 9

19.3 Slew oil 0

19.4 Gear oil 0

19.5 Coolant 0

● Site photo

● Site photo