

 


**Australian Hammer Supplies Hire**  
Unit 3/32 Williamson Road  
Ingleburn  
NSW 2565

KUBOTA U55-4 EXCAVATOR

Minor Service

0 13 83 11

|                   |                                                                                     |                  |                                    |
|-------------------|-------------------------------------------------------------------------------------|------------------|------------------------------------|
| Inspection Number | RP061657                                                                            | Customer No      | 200000                             |
| Serial Number     | 26978                                                                               | Customer Name    | AUSTRALIAN HAMMER<br>SUPPLIES HIRE |
| Make              | KUBOTA                                                                              | Customer Email   |                                    |
| Model             | U55-4                                                                               | Works Order      | RP061657                           |
| Equipment Family  | 4.1-6T HYDRAULIC EXCAVATOR                                                          | Completed On     | 25/08/2026 9:09:06 AM              |
| Asset ID          | AHSH209                                                                             | Inspector        | Jake Raffen                        |
| Location          | AUSTRILAN HAMMER SUPPLIES HIRE<br>Unit 3/32 WILLIAMSON RD<br><br>INGLEBURN<br>2565  | PDF Generated On | 25/08/2026                         |
|                   |                                                                                     | Machine Hours    | 1319                               |
|                   |                                                                                     | Next Meter       | 1500                               |
| Customer          |  |                  |                                    |

General Info & Comments

## General Info/Comments

250hr service



## TASK SAFETY INSTRUCTIONS

- |                                                                                  |        |
|----------------------------------------------------------------------------------|--------|
| 1.1 Wear Correct PPE at all times                                                | NORMAL |
| 1.2 All isolation and safe work procedures must be followed                      | NORMAL |
| 1.3 Identify task hazards and controls utilising hierarchy or controls model     | NORMAL |
| 1.4 Ensure a competent operator and spotter is utilised to move mobile equipment | NORMAL |
| 1.5 Ensure all mobile equipment is fundamentally stable                          | NORMAL |
| 1.6 Ensure three points of contact is maintained during access and egress        | NORMAL |
| 1.7 Ensure acceptable housekeeping standards are maintained at all times         | NORMAL |

## MACHINE GENERAL RUNNINGCHECKS

|                                                                                     |      |
|-------------------------------------------------------------------------------------|------|
| ● 2.1 Check all work lights, beacon & reverse alarm for operation                   | PASS |
| ● 2.2 Test all dash warning lights, gauges and audible alarms for correct operation | PASS |
| ● 2.3 Check idle timer for correct shut down operation                              | N/A  |
| ● 2.4 Check operation of all three emergency stop buttons                           | PASS |
| ● 2.5 Check operation of horn                                                       | PASS |
| ● 2.6 Check operation of reverse camera                                             | PASS |
| ● 2.7 Check alternator charge voltage                                               | PASS |
| ● 2.8 Check operation of auto grease system by manually activating timer            | N/A  |
| ● 2.9 Check fire system control panel for 'Normal'                                  | N/A  |

## PM FIRE SUPPRESSION SYSTEM

|                                                                                                |                                           |
|------------------------------------------------------------------------------------------------|-------------------------------------------|
| ● 5.1 Ensure fire suppression bottle and components are securely mounted and in good condition | N/A                                       |
| ● 5.2 Ensure fire suppression is correctly charged                                             | N/A                                       |
| ● 5.3 Inspect last charge date                                                                 | DATE: 2026-08-25<br>T00:00:00.000000<br>0 |
| ● 5.4 Check all fire extinguishers are securely mounted and in good condition                  | PASS                                      |
| ● 5.5 Check all fire extinguishers are correctly charged                                       | PASS                                      |
| ● 5.6 Inspect last charge date                                                                 | DATE: 2026-08-25<br>T00:00:00.000000<br>0 |

## PM ENGINE

|                                                                                |      |
|--------------------------------------------------------------------------------|------|
| ● 6.1 Perform engine valve set                                                 | N/A  |
| ● 6.2 Inspect air intake system hoses, pipes, clamps for signs of dirt ingress | PASS |
| ● 6.3 Inspect engine for oil or fuel leaks                                     | PASS |
| ● 6.4 Inspect engine components for missing clamps                             | PASS |

|                                                                               |      |
|-------------------------------------------------------------------------------|------|
| ● 6.5 Inspect exhaust systemfor signs of leaks, loose bolts or missing clamps | PASS |
| ● 6.6 Inspect turbo for security and signs of leaks                           | PASS |
| ● 6.7 Inspect condition of exhaust lagging                                    | PASS |
| ● 6.8 Inspect engine mounts for condition and loose hardware                  | PASS |
| ● 6.9 Inspect alternator mount condition and adjustment                       | PASS |
| ● 6.10 Inspect wiring condition and security                                  | PASS |
| ● 6.11 Inspect engine belts                                                   | PASS |

## PM ENGINE COOLINGSYSTEM

|                                                |      |
|------------------------------------------------|------|
| ● 7.1 Check coolant level                      | PASS |
| ● 7.2 Check condition of radiator cap          | PASS |
| ● 7.3 Check condition of radiator core         | PASS |
| ● 7.4 Check cooling systemfor signs of leaks   | PASS |
| ● 7.5 Check hose and clamp condition           | PASS |
| ● 7.6 Inspect fan condition and operation      | PASS |
| ● 7.7 Inspect radiator and fan guard condition | PASS |

## PM SWINGTRANSMISSION

|                                                     |     |
|-----------------------------------------------------|-----|
| ● 8.1 Inspect swing transmission for signs of leaks | N/A |
| ● 8.2 Inspect swing transmission oil level          | N/A |

## PM HYDRAULIC SYSTEM

|                                                           |      |
|-----------------------------------------------------------|------|
| ● 9.1 Check hydraulic oil level                           | PASS |
| ● 9.2 Inspect hydraulic cylinders for leaks and security  | PASS |
| ● 9.3 Inspect hydraulic hoses for leaks, damage, security | PASS |
| ● 9.4 Inspect hydraulic pump condition, leaks, security   | PASS |

- |          |                                                                                                                              |             |
|----------|------------------------------------------------------------------------------------------------------------------------------|-------------|
| <b>●</b> | <b>9.5 Check Pilot Accumulator operation as per OEM Maintenance Procedure - Test Boom Down Functionality with engine off</b> | <i>PASS</i> |
|----------|------------------------------------------------------------------------------------------------------------------------------|-------------|

## PM FINAL DRIVES

- |          |                                                                            |             |
|----------|----------------------------------------------------------------------------|-------------|
| <b>●</b> | <b>10.1 Inspect LHS final drive mount condition for leaks and security</b> | <i>PASS</i> |
| <b>●</b> | <b>10.2 Inspect LHS oil level and mag plug condition</b>                   | <i>PASS</i> |
| <b>●</b> | <b>10.3 Inspect RHS final drive mount condition for leaks and security</b> | <i>PASS</i> |
| <b>●</b> | <b>10.4 Inspect RHS oil level and mag plug condition</b>                   | <i>PASS</i> |

## PM UNDERCARRIAGE

- |          |                                                                      |             |
|----------|----------------------------------------------------------------------|-------------|
| <b>●</b> | <b>11.1 Inspect LHS track tension</b>                                | <i>PASS</i> |
| <b>●</b> | <b>11.2 Inspect RHS track tension</b>                                | <i>PASS</i> |
| <b>●</b> | <b>11.3 Inspect tracks for loose/missing bolts</b>                   | <i>PASS</i> |
| <b>●</b> | <b>11.4 Inspect load and carrier rollers for signs of leaks</b>      | <i>PASS</i> |
| <b>●</b> | <b>11.5 Inspect idlers for signs of leaks</b>                        | <i>PASS</i> |
| <b>●</b> | <b>11.6 Inspect sprocket segments condition</b>                      | <i>PASS</i> |
| <b>●</b> | <b>11.7 Inspect track frame for cracks, lose or missing hardware</b> | <i>PASS</i> |

## PM FRAME AND BODY

- |          |                                                                                                              |             |
|----------|--------------------------------------------------------------------------------------------------------------|-------------|
| <b>●</b> | <b>12.1 Check panels for damage and security</b>                                                             | <i>PASS</i> |
| <b>●</b> | <b>12.2 Check access steps and walkway condition</b>                                                         | <i>PASS</i> |
| <b>●</b> | <b>12.3 Inspect boom condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication</b>  | <i>PASS</i> |
| <b>●</b> | <b>12.4 Inspect stick condition – cracks, missing clamps, damaged pipes, excessive movement, lubrication</b> | <i>PASS</i> |
| <b>●</b> | <b>12.5 Inspect quick hitch condition and operation</b>                                                      | <i>PASS</i> |
| <b>●</b> | <b>12.6 Inspect bucket condition – cracks, wear, damage, mounts</b>                                          | <i>PASS</i> |
| <b>●</b> | <b>12.7 Inspect GET condition and hardware</b>                                                               | <i>PASS</i> |

## PM ELECTRICAL SYSTEM

|   |                                          |      |
|---|------------------------------------------|------|
| ● | 13.1 Check battery condition             | PASS |
| ● | 13.2 Check battery terminal condition    | PASS |
| ● | 13.3 Check battery security              | PASS |
| ● | 13.4 Check battery box drain is clear    | PASS |
| ● | 13.5 Check wiring condition and security | PASS |

## PM GREASE SYSTEM

|   |                                                  |      |
|---|--------------------------------------------------|------|
| ● | 14.1 Check all points for acceptable lubrication | PASS |
| ● | 14.2 Inspect grease system operation             | PASS |
| ● | 14.3 Check grease line condition                 | PASS |
| ● | 14.4 Refill grease tank                          | N/A  |
| ● | 14.5 Lubricate bucket linkage                    | PASS |
| ● | 14.6 Lubricate blade linkage                     | PASS |
| ● | 14.7 Lubricate boom & stick linkage              | PASS |
| ● | 14.8 Lubricate swing bearing                     | PASS |

## PM OPERATOR STATION

|   |                                                                                |      |
|---|--------------------------------------------------------------------------------|------|
| ● | 15.1 Check all doors for correct opening and closing adjustments and operation | PASS |
| ● | 15.2 Inspect condition of door seals                                           | PASS |
| ● | 15.3 Check window glass and seal condition                                     | PASS |
| ● | 15.4 Check mirror condition and adjustments                                    | PASS |
| ● | 15.5 Fill window washer reservoir                                              | PASS |
| ● | 15.6 Inspect air con vents condition                                           | PASS |
| ● | 15.7 Inspect seat belt and mounting hardware                                   | PASS |

● 15.8 Inspect seat condition, operation and mounting PASS

● 15.9 Replace cabin A/C filter PASS

#### OIL SAMPLING

● 16.1 Engine NORMAL

#### PM POST SERVICE INSPECTION CHECKS

● 17.1 All inspections have been completed and rectified as required NORMAL

● 17.2 All safety related defects have been repaired or reported NORMAL

● 17.3 All defects have been noted and reported NORMAL

● 17.4 All fluids are at correct level and drain plugs tight NORMAL

● 17.5 All oil samples have visually been inspected and any notable signs of contamination have been reported NORMAL

● 17.6 All replaced filters have been cut and inspected and photos added to CAT Inspect and reported to supervisor N/A

● 17.7 Machine has been recommissioned and ready for operation NORMAL

● 17.8 PM service notification marked off in Vision Link N/A

#### DEFECTS IDENTIFIED

● 18.1 DEFECTS IDENTIFIED missing boom cylinder guard.  
replaced broken grease nipples  
(fault fixed)

#### OIL USED

● 19.1 Hydraulic oil 0

● 19.2 Engine oil 11

● 19.3 Slew oil 0

● 19.4 Gear oil 0

● 19.5 Coolant 0



**Australian Hammer Supplies Hire**  
Unit 3/32 Williamson Road  
Ingleburn  
NSW 2565

---

● Site photo

---

● Site photo

---

● Site photo

---

● Site photo

---

● Site photo