

6 Transport




WARNING!

Danger of load falling!

The lifting and/or transport equipment, ropes or chains must have sufficient capacity for the weight of the scrap cutter.

Depending on its destination and the customer's requirements the scrap cutter is supplied on a pallet or in a crate.

You must secure the individual parts before transport so that they cannot move.

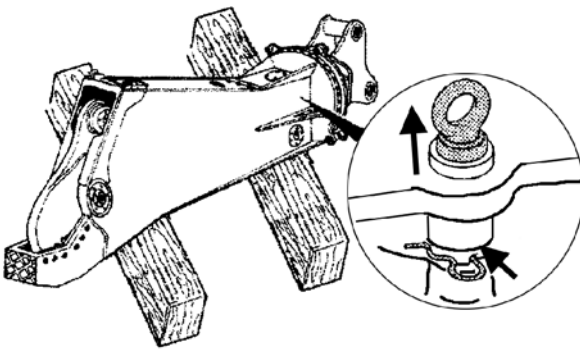

- ▶ Install the anti-rotation pin.
- ▶ Lock the anti-rotation pin with the spring clip.
- ▶ Close the cutter.
- ▶ Secure the cutter against accidental opening.

6.1 Transport by crane

- ▶ Attach the crane ropes and/or chains to the scrap cutter's transport lugs.



WARNING!

Danger due to suspended load!

There must not be any people within the range of the suspended load.

- ▶ Slowly lift the scrap cutter using the crane.
- ▶ Place the scrap cutter on wooden supports at the required location.

