

6. OPERATING CONDITIONS

The FEELENG hydraulic crusher is designed to be mounted on hydraulic excavators and is suitable for the following applications

Demolition of buildings such as tall concrete structures, industrial structures/buildings and bridges.

After mounting, the hydraulic crusher is provided with all necessary power by the carrier and is operated by the carrier driver from the cab.

WARNING

- The abnormal operation can make the very bad influence on the crusher and bring out the defect.

CAUTION

- To exclude the possibility of injury to employee, the safety regulations valid in the country of use must be observed when operating the excavator.

7. LIFTING AND STORING

CAUTION

- When lifting the hydraulic crusher, use only the lug provided and sufficiently powerful lifting equipment.

Ropes and lug must be in good condition.

Lift to use the center of the equipment with the lift loop or hole established at crusher. The hydraulic crusher should be deposited for storage on a wooden support of sufficient size and strength.

Also the jaw of the crusher must be kept completely close.

Collect any oil which runs out when the hydraulic hose are disconnected and dispose of it correctly. Seal off any open lines.